

Broom Finish

SunRestore Broom Finish




INSTEAD OF REPLACING DAMAGED CONCRETE, RESTORE IT!



SunRestore Broom Finish Concrete Restoration is an economical option to replacing your existing damaged concrete. Application of this resilient overlay will mask the appearance of imperfect or damaged concrete to make it look like new concrete all over again.

HOW IS IT DONE?

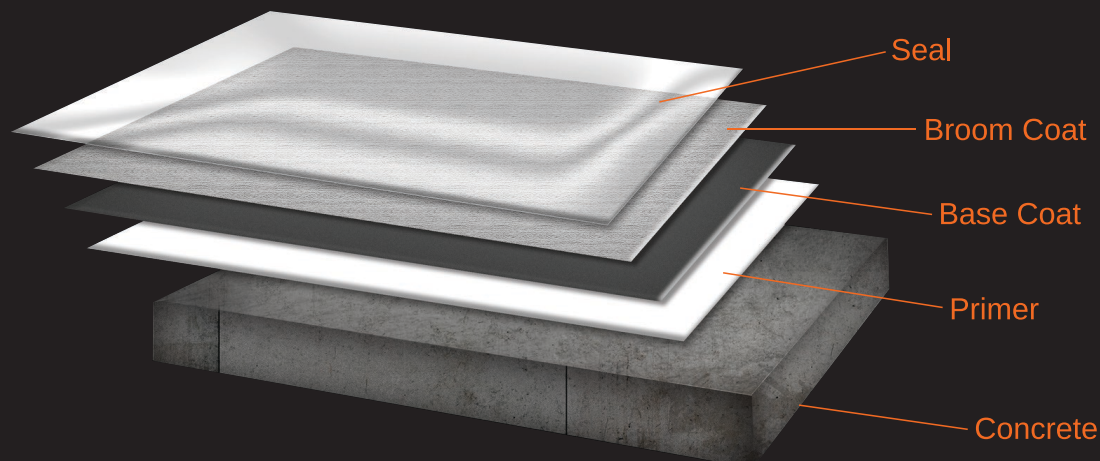

APPLICATION INSTRUCTIONS

- Properly profile the concrete.
- Pressure wash and clean concrete.
- Acid etch or grind repair all cracks and spalls. Protect property as needed.
- Spray or roll diluted additive as a primer coat.
- Pour the blending mix base in a ribbon. Spread with an asphalt squeegee.
- Scrape away edges when dry.
- Pour the broom coat in a ribbon. Spread with a magic trowel.
- Broom finish immediately.
- Once dry, grind/cut out your joints. Scrape and remove debris.
- Spray or roll finish coat (clear or colored) applying two coats in the opposite directions (i.e. north-south, then east-west).